

Description	Cat No.
TORCH PARTS & CONSUMABLES	
XT™-301 TORCH HEAD ASSY	35-1001
SHIELD CUP ASSY	35-1016
SHIELD CUP, 200A	35-1018
SHIELD RETAINER, 200A	35-1019
CARTRIDGE ASSY,	35-1020
SHIELD CAP, 55A, MS	35-1025
SHIELD CAP, 100A, MS	35-1027
SHIELD CAP, 55 -100A, SS	35-1034
SHIELD CAP, 200A, AIR	35-1028
SHIELD CAP, 200A, O2	35-1029
GAS DISTRIBUTOR, 55-100A, ANY GAS	35-1041
GAS DISTRIBUTOR, 55-100A, NO OXYGEN, ALL OTHER GASES	35-1042
GAS DISTRIBUTOR, 200A, O2	35-1046
TIP, 55A, MS	35-1051
TIP, 100A, MS	35-1053
TIP, 55A, SS	35-1060
TIP, 100A, SS	35-1062
TIP, 200A, AIR	35-1055
TIP, 200A, O2	35-1056
ELECTRODE, 55A MS	35-1069
ELECTRODE, 100A MS	35-1071
ELECTRODE, 55A SS	35-1078
ELECTRODE, 100A SS	35-1080
ELECTRODE, 200A, AIR	35-1085
ELECTRODE, 200A, O2	35-1086
SHIELD GAS DIST, 55-100A MS/SS	35-1272
SHIELD GAS DIST, 200A, AIR	35-1280
SHIELD GAS DIST, 200A, O2	35-1281
OHMIC SENSOR ASSEMBLY, PKD	9-9414
O-RING, TORCH HEAD	8-0530
O-RING, TORCH HEAD	8-0534
O-RING, TORCH HEAD	8-0539
TOOL BOX	9-4173
LABEL	N/A
TORCH POSITIONING TUBE	9-4700
TORCH MOUNTING CLAMP	9-9336
TORCH MANUAL	0-4822